
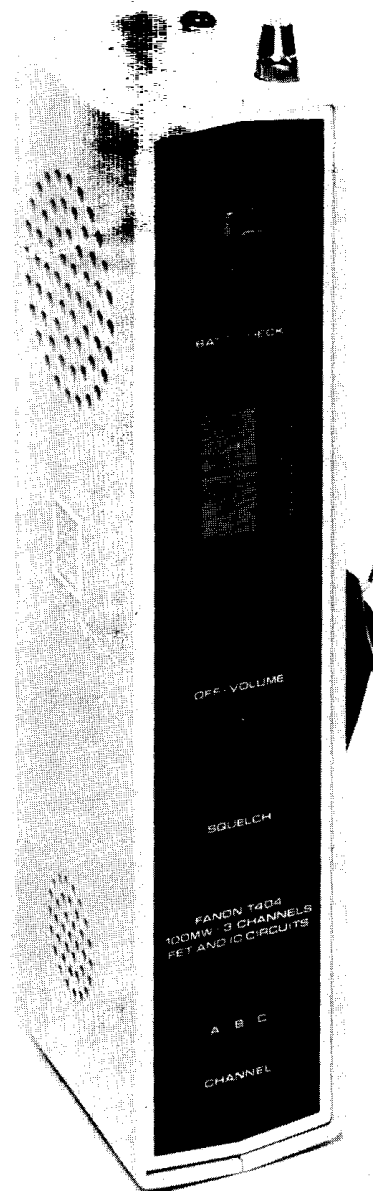


OWNER'S MANUAL

FANON

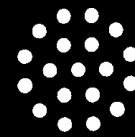

Scanned by IW1AXR

Downloaded by
RadioAmateur.EU

**MODEL T404
CITIZENS BAND
TRANSCEIVER**

SPECIFICATIONS

MODEL T404

GENERAL


- * FET - 1
- * Transistor - 8
- * Integrated Circuit - 1
- * Diode - 5
- * Self-contained speaker - 2 $\frac{1}{4}$ " - 8 ohms voice coil
- * Self-contained separate microphone
- * Battery condition indicator
- * Battery indicator switch
- * Built-in telescopic whip antenna
- * Ceramic filter - 1
- * Operates from 12 V DC batteries
- * 3 channel selector
- * Off-on volume control
- * Squelch control
- * Call button
- * Earphone jack
- * Push-to-talk button
- * Cabinet Dimensions: 2" (W) \times 9 $\frac{3}{8}$ " (H) \times 3" (D)
- * Weight: 1.5 lbs.

RECEIVER SECTION

- Frequency Range: 26.965 to 27.255 MHz
- Sensitivity: 1.0 μ V for 10 db S/N at 1000 cps at 30% modulation
- Adjacent channel rejection: 26 db
- Audio distortion at 1000 cps: Less than 3% at 50 mW
- Squelch sensitivity: 0.5 μ V
- Image rejection: 20 db
- Audio output at 8 ohms: 300 mW

TRANSMITTER SECTION

- Frequency Range: 26.965 to 27.255 MHz
- Power input at 12V DC: 100 mW
- Power output at 12V DC: 60 mW
- Modulation capability: 100%
- Frequency tolerance: \pm 0.005%
- Modulation distortion: Less than 8% at 95% Mod. at 1000 cps.

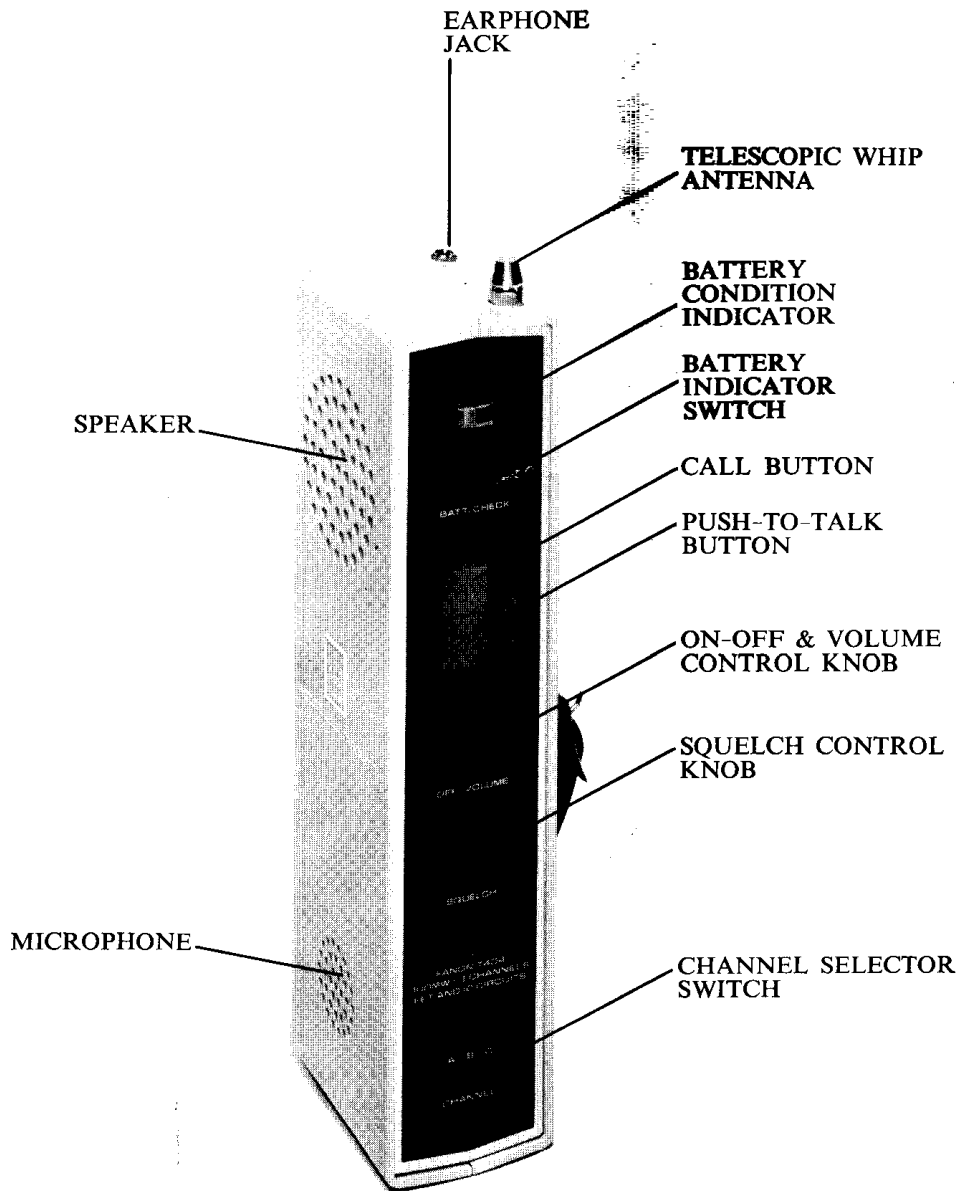

DESCRIPTION

The model T404 is a full 100 mW **hand-held** transceiver designed for portable three channel, two way radio communication in the Citizens Band (27 MHz).

BATTERY INSTALLATION

The detachable bottom of the transceiver is designed to house eight "AA" size (penlite) battery cells in series.

1. To Remove the bottom battery holder, loosen screw with a screw driver or coin.
2. Refer to Figure 1 and install the eight batteries in series as shown.



USING OPTIONAL NICKEL CADMIUM BATTERY PACK (MODEL NCA-1A)

The Nickel Cadmium Battery pack, (Model NCA-1A) although higher in initial cost than ordinary dry, alkaline battery cells, can be recharged hundreds of times for long-lasting economical power. They are hermetically sealed in steel cases. Refer to figure 2 for insertion of Model NCA-1A.

To charge the battery

The section titled "BATTERY CONDITION INDICATOR" on a succeeding page provides the information necessary for determining when the batteries require recharging. Plug the AC cord into battery pack and insert the other plug into any convenient 117V AC outlet. Leave charger on for at least 15 hours, if possible.

It is a good idea to recharge Nickel Cadmium batteries for a few hours when first installing them in the transceiver as they may have lost some of their charge during shipment from the factory.

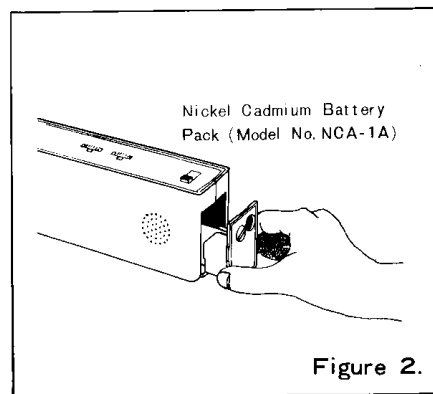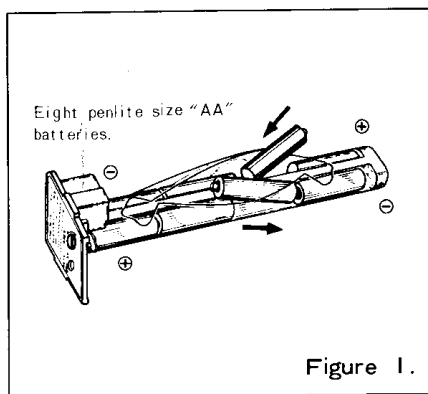

OPERATION AND CONTROLS

1. Extend the telescoping whip antenna to its **full length**.
Avoid bending the slim, top section of the **antenna when extending or collapsing** it.
2. Turn volume control up-ward to switch the **unit "ON"**. Turn the squelch control to the fully "open" position **initially (down-ward)**, and increase volume until background noise is heard. **Turn Channel Selector** to desired channel.

(Remember, the unit is originally supplied **with crystals** for operation on channel 15 only, usually in the A position).

3. To transmit, hold unit so that the grille (**microphone**) is **5 inches** away from your lips Fully depress the **Push-to-talk button**. **Speak clearly** at a normal level. When you have completed your message, **release button**.

NOTE: When one unit is transmitting, it is **not possible for this unit to hear** any message directed to it. Do not, **therefore**, attempt to talk until the other station has finished transmitting.

4. The squelch circuit in the receiver section of the transceiver is used to eliminate annoying background noise when no signals are present.

To adjust the SQUELCH control properly during reception, turn up VOLUME until background noise is heard (no signals should be present). Rotate the SQUELCH slowly up-ward until the background noise just disappears, then rotate slightly further. At this point, the receiver will be quiet between transmissions, but a transmitted signal will overcome the squelch action and be heard.

Do not advance the control too far or some of the weaker signals will not be heard. If you wish to receive extremely weak signals or disable the squelch circuit, simply turn the control to the fully downward position.

CHANNEL SELECTOR SWITCH

Your transceiver is equipped to transmit and receive on three channels, channel 15 (27.135 MHz) and two other optional channels.

Position A represents Channel 15 (27.135 MHz) and positions B and C, any channels as desired.

EARPHONE JACK

Plug an earphone into the jack marked EAR.

This will cut off the main speaker in the unit, enabling private listening.

The plugged-in earphone will not affect the built-in microphone during transmitting.

HOW TO USE THE ALERT SYSTEM

This system provides for the **sending** of an alert tone which precedes the communication.

Operate the system as follows:

- (1) Turn unit "on", and increase **volume** until background noise is heard.
- (2) To transmit the call signal, **depress** the call button.



The call tone will be heard at **the** companion unit every time the call button is depressed.

BATTERY CONDITION INDICATOR

To check the battery voltage simply **switch** the unit "on" and push **battery** the indicator switch.

If the batteries being used are dry **cells**, replacement is necessary as the meter pointer is on the center position. (see "A").

If nickel cadmium batteries are being used, recharge the batteries as soon as the pointer falls slightly below the **maximum** points (see "B").

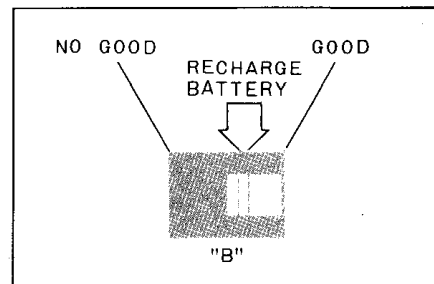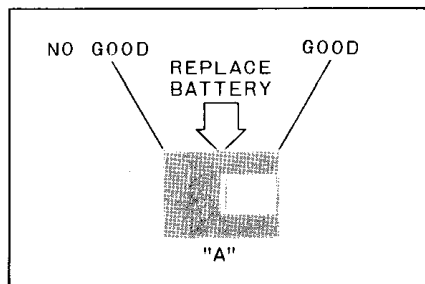

INSERTING NEW CRYSTALS

1. Remove the battery holder, and **remove** the crystal compartment cover on the right side of the unit.
2. Figure 3 shows the location of the crystals for each channel. Optional crystal may be ordered from your dealer.
3. Insert the new matched pair of crystals into the sockets.

Each crystal will be marked with **the** channel (1-23), transmit or receiver (T or R), and frequency. Make **sure** the transmitter (T) and receiver (R) crystals are installed in their **correct** sockets. If the crystals are reversed, the unit will transmit on one frequency and receive on another, both of which will be outside the citizens **band**, resulting in illegal operation.

4. Replace the battery holder and crystal compartment cover. The unit is now ready for operation.

CITIZENS BAND FREQUENCY CHART

CHANNEL		TRANSMIT CRYSTALS (MHz)	RECEIVE CRYSTALS (MHz)
U.S.A.	CANADA		
1	Do not use	26.965	26.510
2	"	26.975	26.520
3	"	26.985	26.530
4	4	27.005	26.550
5	5	27.015	26.560
6	6	27.025	26.570
7	7	27.035	26.580
8	8	27.055	26.600
<u>9</u>	<u>9</u>	<u>27.065</u>	<u>26.610</u>
10	10	27.075	26.620
11	11	27.085	26.630
12	12	27.105	26.650
13	13	27.115	26.660
14	14	27.125	26.670
<u>15</u>	<u>15</u>	<u>27.135</u>	<u>26.680</u>
16	16	27.155	26.700
<u>17</u>	<u>17</u>	<u>27.165</u>	<u>26.710</u>
18	18	27.175	26.720
19	19	27.185	26.730
20	20	27.205	26.750
21	21	27.215	26.760
22	22	27.225	26.770
23	Do not use	27.255	26.800

Receive crystal is 455 KHz lower in frequency than transmit crystal.
Channel 23 is shared with class C Radio Control.

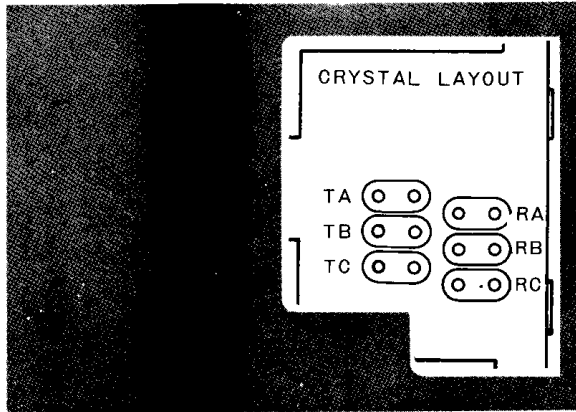


Figure 3.

ACCESSORY

Ask your dealer about optional carrying case,
Model CAT-1.

CAUTION



For service, remove NCA-1A battery pack before separating
cabinet halves.

**NOTICE TO
SERVICEMAN**

Use extreme caution when opening cabinet.
The antenna must be clear of the hole so the cabinet section
can be moved freely.

SCHEMATIC DIAGRAM


176 - 053 T404 (X1) - CIRCUIT DIAGRAM

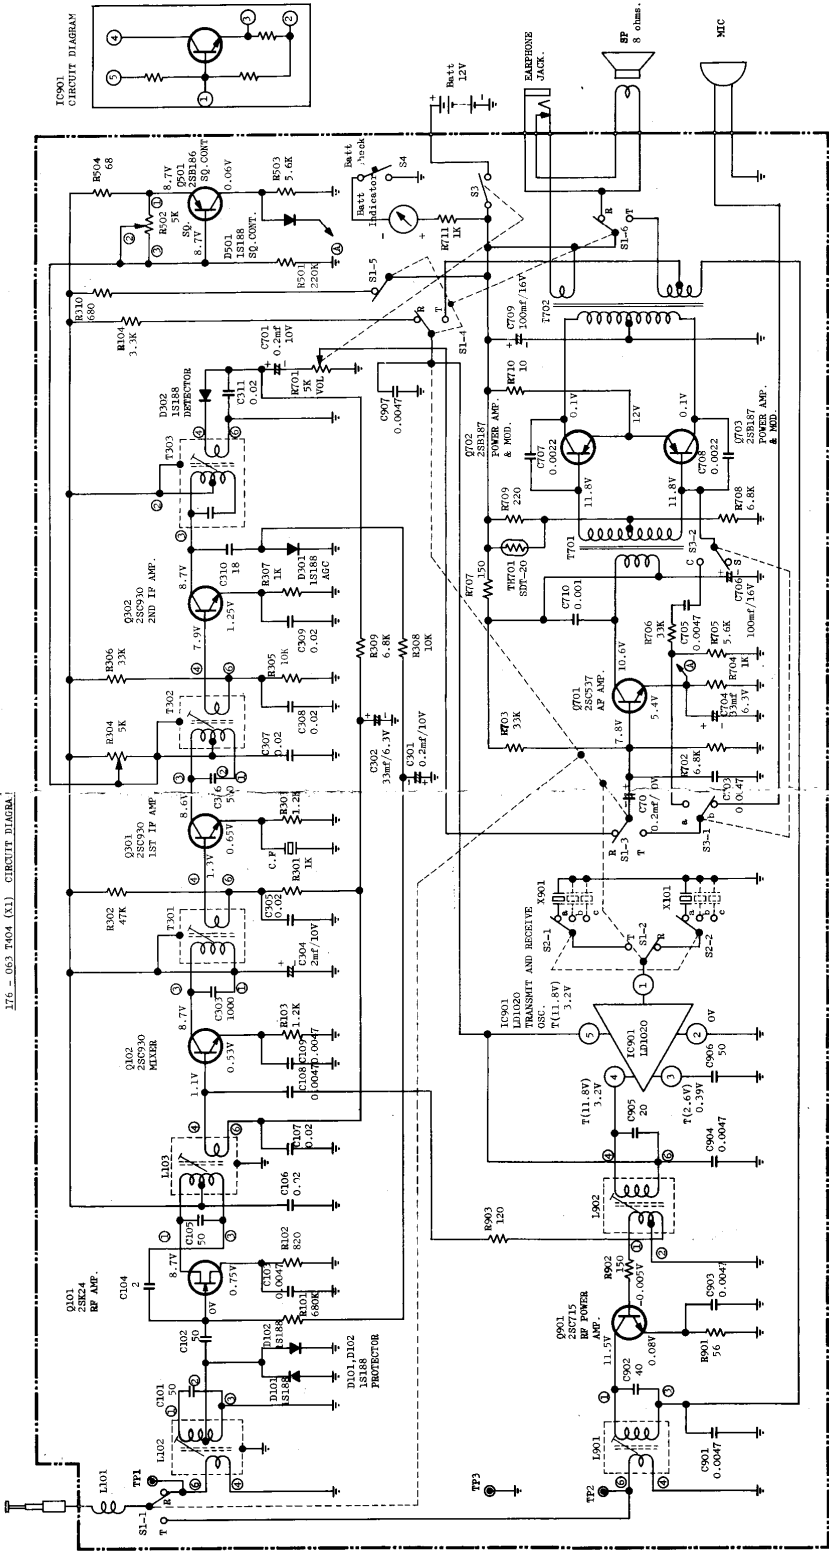


NOTES: 1. All resistance values are in ohms, K=1,000 ohms.

2. All capacitance values less than 1.0 are in "pfd" and greater than 1.0 are in "mfd" unless otherwise specified.

3. All voltages are measured from the common negative ground (-) to respective terminals of transistors and integrated circuit (IC) with V.T.V.M. under no signal condition, and transmit position under no mod, speech off.

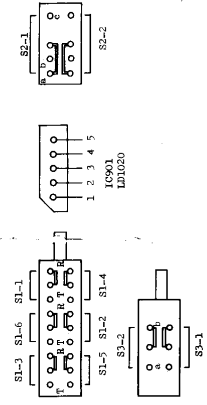


BOTTOM VIEW

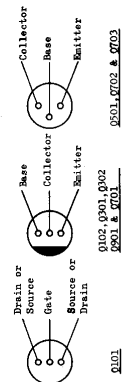


MODEL T404 ISSUE A

P.C. BOARD DIAGRAM

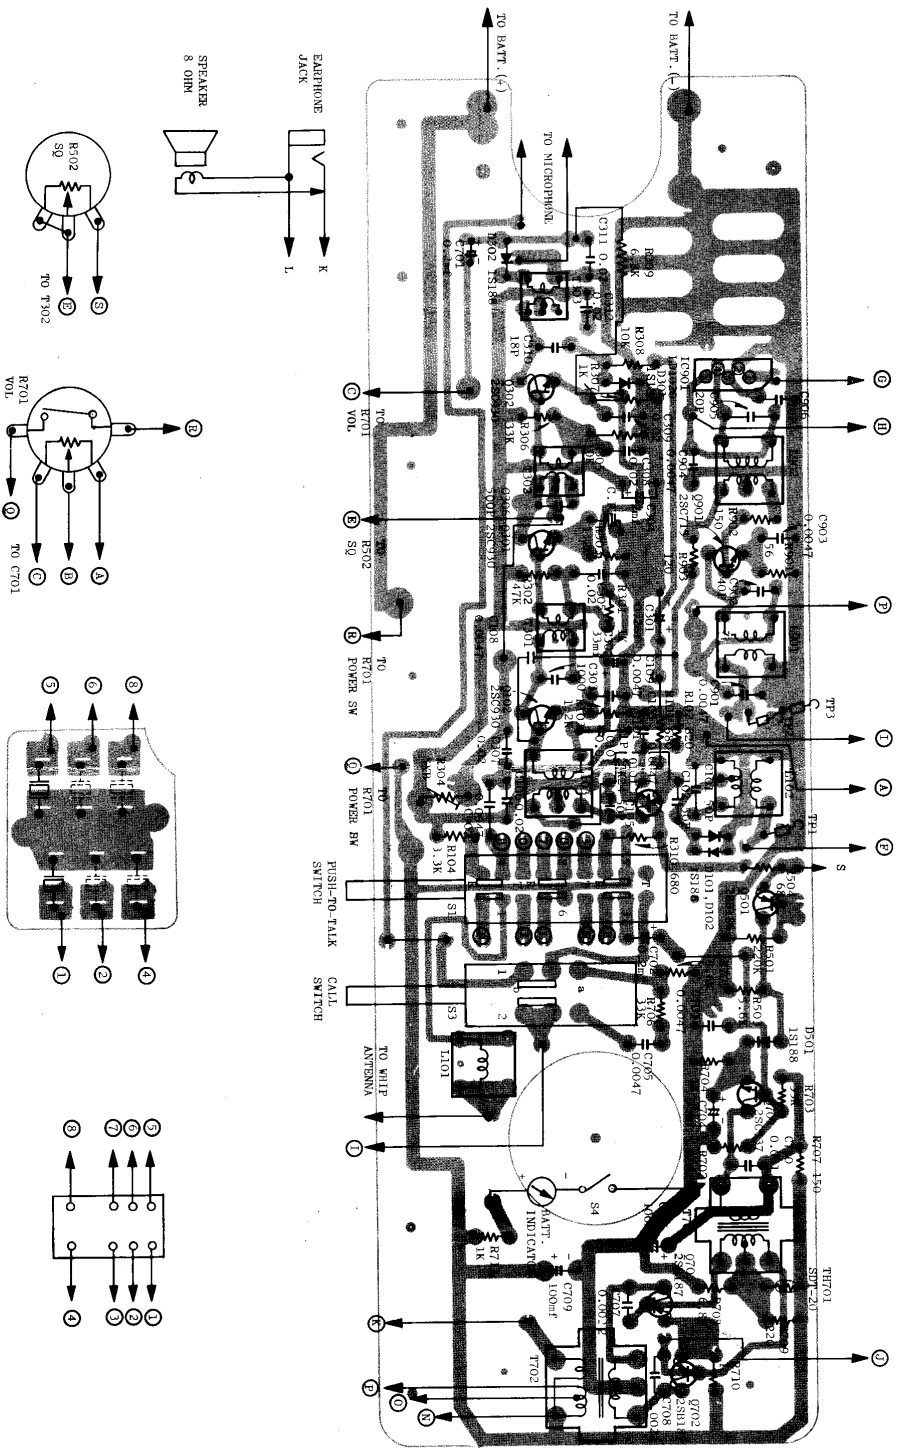

MODEL T404 ISSUE A

COMPONENT LAYOUT

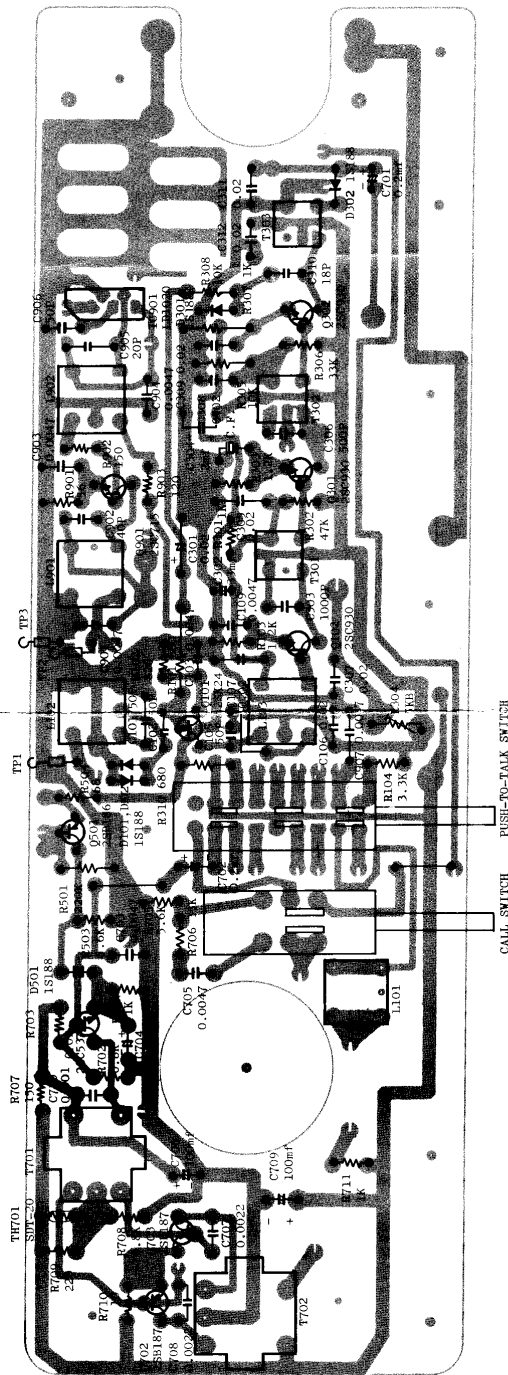

CALL SWITCH
PUSH-TO-TALK SWITCH

REPLACEMENT PARTS LIST

Symbol No.	Description	Part No.
SEMI CONDUCTORS		
Q101	2SK24 E FET	1002-01
Q102, 301, 302	2SC930 E Transistor	1002-02
Q901	2SC715 D "	1002-03
Q701	2SC537 E "	1002-04
Q501	2SB186 A "	1002-05
Q702, 703	2SB187 Red, Brown "	1002-06
IC901	LD1020 Integrated Circuit (IC)	1002-07
TH701	SDT-20 Thermistor	1002-08
D101, 102, 301, 302, 501	1S188 AM Diode	1002-09
C, F.	Ceramic Filter	1002-10
X901	Crystal, 27.135 MHz	1002-11
X101	Crystal, 26.680 MHz	1002-12
COILS AND TRANSFORMER		
L101	Loading Coil	1002-13
L102, 103	RF coil	1002-14
L901	RF coil	1002-15
L902	OSC coil	1002-16
T301	IFT	1002-17
T302	IFT	1002-18
T303	IFT	1002-19
T701	IFT	1002-20
T702	OPT	1002-21
MISCELLANEOUS		
R701	Volume control, SKD	1002-22
R502	Squelch control, SKD	1002-23
R304	Miniature trimmer control, SKB	1002-24
S1	Push-to-talk switch	1002-25
S3	Call switch	1002-26
S2	Channel switch	1002-27
	Crystal socket (6usecd)	1002-28
	Earphone socket	1002-29
	Telescopic whip antenna	1002-30
	Battery condition indicator	1002-31
SP	Speaker, 2 1/4" 8 ohms	1002-32
MIC	Microphone	1002-33
	Earphone	1002-34
	Cabinet complete, right and left	1002-35

Symbol No.	Description	Part No.
RESISTORS		
R710	10 ohm ±10%	1/4W
R901	56 ohm "	"
R504	68 ohm "	"
R903	120 ohm "	"
R707, 902	150 ohm "	"
R709	220 ohm "	"
R310	680 ohm "	"
R102	820 ohm "	"
R301, 307, 704, 711	1 Kohm "	"
R103, 303	1.2 Kohm "	"
R104	3.3 Kohm "	"
R503, 705	5.6 Kohm "	"
R309, 702, 708	6.8 Kohm "	"
R305, 308	10 Kohm "	"
R306, 703, 706	33 Kohm "	"
R302	47 Kohm "	"
R501	220 Kohm "	"
R101	680 Kohm "	"
CAPACITORS		
C706, 709	100 mfd 16V	Electrolytic
C302, 704	33 mfd 6.3V	"
C301, 701, 702	0.2 mfd 10V	"
C304	2 mfd 10V	"
C104	2 pfd ±0.25 pfd 50V	Ceramic
C310	18 pfd ±10%	"
C905	20 pfd "	"
C902	40 pfd "	"
C101, 102, 105, 906	50 pfd "	"
C306	500 pfd ±5%	Styrol
C303	1000 pfd "	"
C710	0.001 mfd ±20%	Mylar
C707, 708	0.0022 mfd "	"
C103, 108, 109, 901, 903, 904, 907, 703, 705	0.0047 mfd "	"
C106, 197, 305, 307, 308, 309, 311	0.02 mfd "	"

Scanned by IW1AXR
 Downloaded by
 RadioAmateur.EU